

J-MOUNT™

FITMENT GUIDE

1



Press the nylock nuts into the bottom bracket cavity making sure it is deep and straight to not strip the plastic

2




Place and hold the bottom bracket in the desired mounting location, keep your hand over the cavity to keep the nylock secure

3



first screw the one side halfway or till the nylock nut is pulled deep into the cavity to secure the nut from falling out

4

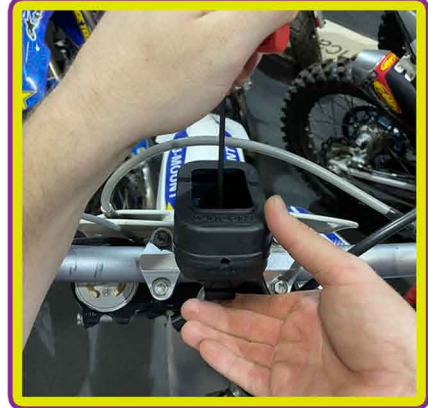

then screw the other side by tilting the mount so you can still cover the cavity and keep the nylock nut from falling out

5



place your j-mount at the desired angle and evenly screw both sides till the mount is secure (do not overtighten)

6



make sure both screws are evenly spaced and tightened. NOTE: if overtightened the nut can strip inside the cavity